1. Подключение кабелей к телефону

- 1. Соединить телефонную трубку и телефон специальным кабелем из состава поставки.
- 2. Соедините порт LAN телефона с локальной сетью с помощью кабеля Ethernet.
- 3. Соедините телефон с источником питания из состава поставки. Включите блок питания в электрическую розетку.
- 4. Встроенный LCD-дисплей отобразит последовательность загрузки. Необходимо дождаться момента, когда на экране отобразится дата/время.
- 5. SIP-видеотелефон получает IP-адрес и другие сетевые настройки по DHCP от CPE (Ethernet- или ADSL-маршрутизатор)абонента.



Рис.1 Схема подсоединения Видеотелефона.

2. Конфигурирование телефонного аппарата с использованием Webбраузера

- 1. Загрузите на ПК Web-браузер
- 2. Впишите IP-адрес телефона (он отображается на экране телефона) в поле адреса браузера на компьютере, нажмите Enter
- 3. В открывшемся окне введите пароль администратора «Admin»



Рис.2 Ввод пароля администратора

- 4. В появившемся окне перейдите на вкладку Account 1
- 5. Введите Ваши значения параметров Account Name, SIP server, SIP User ID, Authenticate ID, Authenticate Password, Name, как показано на рис.3.

Gra	ndstream Device Configuration
STATUS BASIC SETTINGS	ADVANCED SETTINGS ACCOUNT 1 ACCOUNT 2 ACCOUNT 3
Account Active: Account Name: SIP Server:	○ No Yes sip_test_4 (e.g., MyCompany) tb.mo.centertelecom.ru (e.g., sip.mycompany.com, or IP address)
Outbound Proxy: SIP User ID: Authenticate ID: Authenticate Password:	(e.g., proxy.myprovider.com, or IP address) sip_test_4 (the user part of an SIP address) sip_test_4 (can be same or different from SIP UserID) (not displayed for security protection)
Name: Use DNS SRV: User ID is phone number: SIP Registration: Unregister On Reboot: Register Prejection:	Grandstream2 (optional, e.g., John Doe) No Yes No Yes No Yes No Yes No Yes S0 (optional, e.g., John Doe) (optional, e.g., John Doe) S0 (optional, e.g., John Doe) (option
SIP Registration Failure Retry Wait Time: local SIP port: NAT Traversal (STUN): Keep-Alive Using SIP OPTIONS: SUBSCRIBE for MWI:	20 (in seconds. Between 1-3600, default is 20) 5060 (default 5060) Image: Solid and the second se
Proxy-Require: SIP Compact Header: Voice Mail UserID: Send DTMF:	 No ○ Yes (UserID for voice mail system) in-audio ○ via RTP (RFC2833) ○ via SIP INFO
Early Dial: Dial Plan Prefix: Dial Plan: Dial Plan:	No Yes (use "Yes" only if proxy supports 484 response) (this prefix string is added to each dialed number) {x+ *x+}
Delayed Call Forward Wait Time: Enable Call Features: Session Expiration: Min-SE:	20 (Allowed range 1-120, in seconds.) O No Yes (if yes, call features using star codes will be supported locally) 180 (in seconds. default 180 seconds) 90 (in seconds. default and minimum 90 seconds)
Caller Request Timer: Callee Request Timer: Force Timer:	 No Yes (Request for timer when making outbound calls) No Yes (When caller supports timer but did not request one) No Yes (Use timer even when remote party does not support)
UAS Specify Refresher: UAS Specify Refresher: Force INVITE: Enable 100rel:	 UAC UAC UAS (When UAC did not specify refresher tag) No Yes (Always refresh with INVITE instead of UPDATE) No Yes
Account Ring Tone:	system ring tone custom ring tone 1 custom ring tone 2 custom ring tone 3
Send Anonymous:	 No Yes (caller ID will be blocked if set to Yes)
Refer-To Use Target Contact:	 No ○ Yes
Disable Multiple Media Attribute in SDP:	💿 No 🗢 Yes
Auto Answer: Preferred Vocoder: (in listed order)	 No Yes Enable Paging/Intercom choice 1: PCMA choice 2: PCMA choice 3: PCMA choice 7: PCMA choice 8: PCMA
Preferred Video Coder: (in listed order)	choice 1: H.264 v choice 2: H.264 v choice 3: H.264 v
Choose Video Codec By Local Preference: Jitter Delay: Enable Video: H.264 payload type:	 No ∨ Yes Medium ▼ ○ No ○ No, but allow in-call enabling ⊙ Yes 99 (Between 96 and 127, default is 99)
H.263 + payload type: H.263 Default Resolution: Enable RFC5168 Support:	103 (Between 96 and 127, default is 103) Image: CIF Image: QCIF Image: No Yes Image: Disabled Image: Enabled but not forced
SKIF Mode: Special Feature:	Enabled and forced O Optional Standard
All 0	Update Cancel Reboot

Рис.3 Настройка необходимых параметров